

Objective

This example project demonstrates the BLE Glucose Meter application workflow.

Overview

This example project demonstrates the BLE Glucose Meter application workflow. The Glucose Meter application uses the BLE Glucose Profile to report glucose measurement records to a Client. Also, the Glucose Meter application uses the Battery Service to notify the Battery Level and the Device Information Services to assert the Device Name, etc.

Requirements

Tool: PSoC Creator™ 4.2

Programming Language: C (ARM® GCC 5.4-2016-q2-update)

Associated Parts: All PSoC 6 BLE parts

Related Hardware: CY8CKIT-062-BLE PSoC 6 BLE Pioneer Kit

Hardware Setup

This example uses the kit's default configuration. Refer to the [kit guide](#) to ensure the kit is configured correctly.

1. Connect the BLE Pioneer Kit to the computer's USB port.
2. Connect the BLE Dongle to one of the USB ports on the computer.

LED Behavior

If the VDDD voltage is set to less than 2.7 V in the DWR settings **System** tab, only the red LED is used. The red LED blinks to indicate that the device is advertising. The red LED is OFF when a device is connected to a peer device. When the device is in Hibernate mode, the red LED stays ON.

LED behavior for VDDD Voltage > 2.7 volts is described in **Operation** section.

Software Setup

BLE Host Emulation Tool

This example requires the CySmart application. Download and install either the [CySmart Host Emulation Tool](#) PC application or the CySmart app for [iOS](#) or [Android](#). You can test behavior with any of the two options, but the CySmart app is simpler. Scan one of the following QR codes from your mobile phone to download the CySmart app.

iOS



Android



Terminal Tool

This example uses a terminal window. You must have terminal software, such as Tera Term, or PuTTY.

Operation

The project sends the Glucose Service characteristic's notifications/indications and Battery Level notifications to the Client device. The LEDs are blinking as described in the Design section. The project sends log messages through the UART.

The green LED blinks while the device is advertising. The red LED is turned ON after disconnection to indicate that no Client is connected to the device. When the Client connects successfully, the red and green LEDs are turned OFF. The blue LED is used for indicating a low battery level (<10%). Note that after the first connection establishment and until either device goes to sleep, the blue LED will continuously glow indicating the low battery.


The Glucose Meter device requires authentication, the I/O capability is "display only", the Glucose Meter device indicates a passkey through the UART. You should enter that passkey into the Client device. If the Client is paired with the Glucose Meter, the Glucose Measurement, Glucose Measurement Context (if it is supported by Client) characteristic notifications, and the Record Access Control Point (RACP) characteristic indication should be enabled. Then the Record Access Control Point (RACP) characteristic can be written to assert any Glucose RACP requests (for details, see the [Glucose Profile](#) and [Glucose Service](#) specifications adopted by Bluetooth SIG).

When the RACP request is asserted, the Client should wait for any Glucose Measurement, Glucose Measurement Context (if it is supported by the Client) characteristic notifications and the RACP characteristic indication (dependent on asserted request), or write the **Abort Operation** command into the RACP characteristic.

Operation Steps

1. Plug the CY8CKIT-062-BLE kit board into your computer's USB port.
2. Open a terminal window and perform following configuration: Baud rate – 115200, Parity – None, Stop bits – 1, Flow control – XON/XOFF. These settings must match the configuration of the PSoC Creator UART Component in the project.
3. Build the project and program it into the PSoC 6 MCU device. Choose **Debug > Program**. For more information on device programming, see PSoC Creator Help. Flash for both CPUs is programmed in a single program operation.
4. Observe the green LED blinks while the device is advertising, and the output in the terminal window.
5. Do the following to test example, using the CySmart Host Emulation Tool application as Glucose Service Client:
 - a. Connect the BLE Dongle to your Windows PC. Wait for the driver installation to complete, if necessary.
 - b. Launch the CySmart Host Emulation Tool by right-clicking on the BLE Component and selecting **Launch CySmart**. Alternatively, you can launch the tool by navigating to **Start > Programs > Cypress** and clicking on **CySmart**.
 - c. CySmart automatically detects the BLE dongle connected to the PC. Click **Refresh** if the BLE dongle does not appear in the **Select BLE Dongle Target** pop-up window. Click **Connect**, as shown in [Figure 1](#).


Figure 1. CySmart BLE Dongle Selection

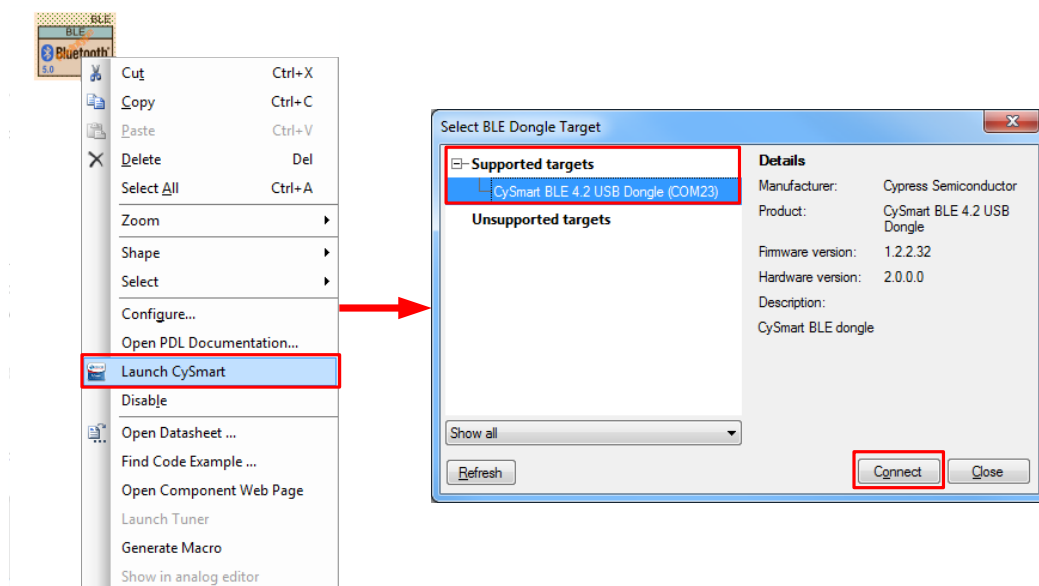

Note: If the dongle firmware is outdated, you will be alerted with an appropriate message. You must upgrade the firmware before you can complete this step. Follow the instructions in the window to update the dongle firmware.


- d. Select **Configure Master Settings** and then click **Restore Defaults**, as Figure 2 shows. Then click **OK**.

Figure 2. CySmart Master Settings Configuration

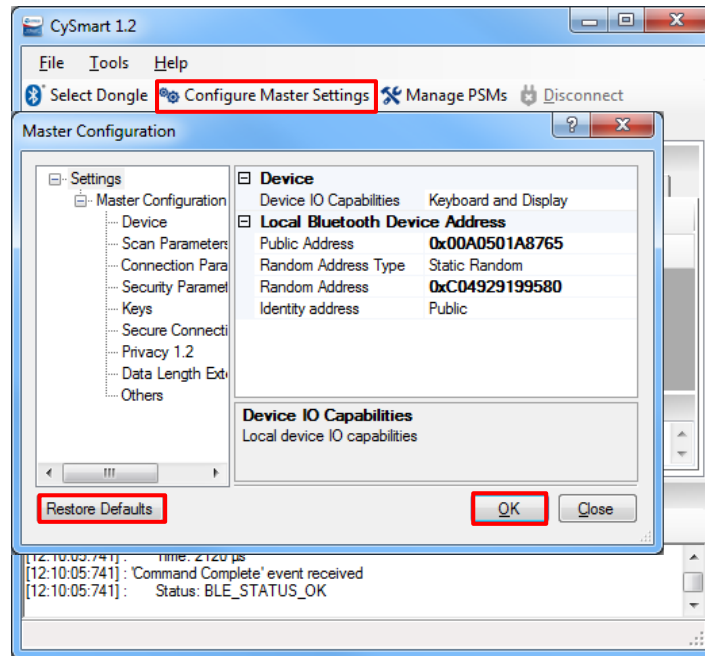


- e. Press the reset switch on the Pioneer Kit to start BLE advertisement if no device is connected or device is in Hibernate mode (red LED is on). Otherwise, skip this step.
- f. On the CySmart Host Emulation Tool, click **Start Scan**. Your device name (configured as **Glucose Sensor**) should appear in the Discovered devices list, as Figure 3 shows. Select the device and click **Connect** to establish a BLE connection between the CySmart Host Emulation Tool and your device.

Figure 3. CySmart Device Discovery and Connection

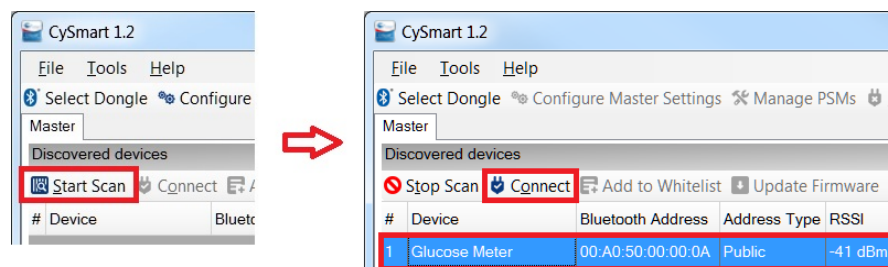


- g. Once connected, switch to the '**Glucose Meter**' device tab and '**Discover all Attributes**' on your design from the CySmart Host Emulation Tool, as shown in Figure 4.

Figure 4. CySmart Attribute Discovery

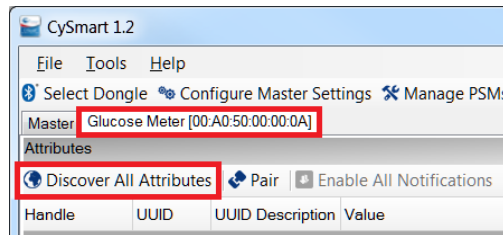


- h. Click **Pair** after discovery finishes, then **Enable All Notifications** in the CySmart app as shown in Figure 5.

Figure 5. CySmart Pair and Enable All Notification

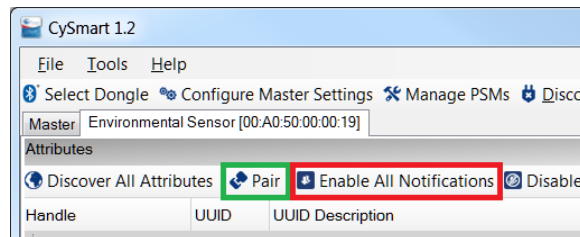

- i. To get the Glucose Service functionality, for example, select the **RACP (Record Access Control Point)** characteristic value and write the command **01:01** which means "Report All Glucose Measurement Records" (all these commands are described in detail in the [Glucose Service](#) specifications).

Figure 6. Writing value to Record Access Control Point characteristic

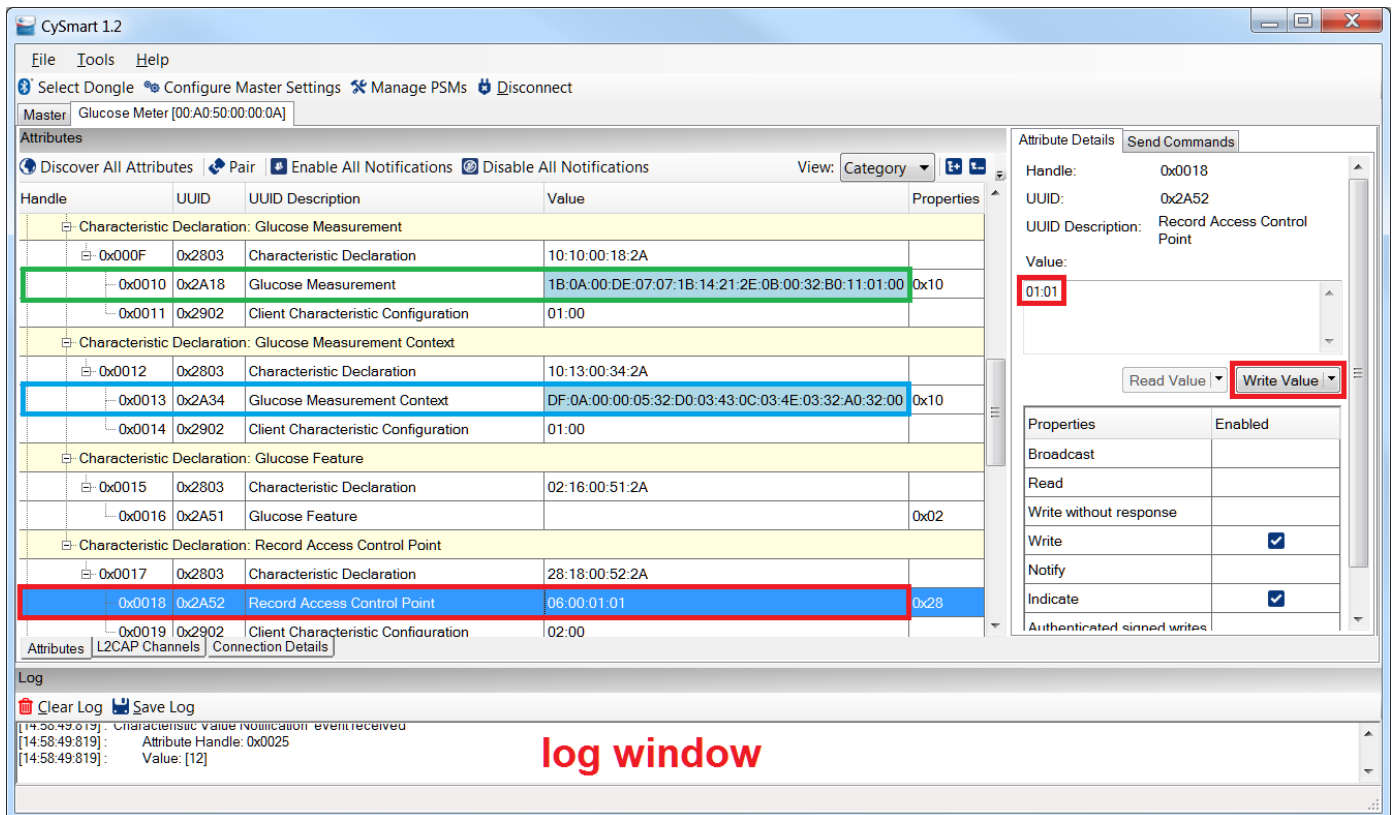


- j. Observe the CySmart's log window: The Server sends eleven **Glucose Measurement characteristic notifications** and three **Glucose Measurement Context characteristic notifications** and then the **RACP** indication **"06 00 01 01"** which means "The **Report All Glucose Measurement Records** command is performed successfully". An example of the successful execution of **Report All Glucose Measurement Record** is shown in the following extract from the CySmart log:

```
[17:45:08:757] :A Write Characteristic Value request is sent.
[17:45:08:757] : Attribute Handle: 0x0018
[17:45:08:757] : Value: 01:01
[17:45:08:762] : The Command Status event is received.
[17:45:08:762] : Status: BLE_STATUS_OK
[17:45:08:777] : The Command Complete event is received.
[17:45:08:777] : Status: BLE_STATUS_OK
[17:45:08:805] : The Characteristic Value Notification event is received.
[17:45:08:805] : Attribute Handle: 0x0010
[17:45:08:805] : Value: 09:00:00:DE:07:07:1B:14:1E:28:00:00:01:00
[17:45:08:805] : The Characteristic Value Notification event is received.
[17:45:08:805] : Attribute Handle: 0x0010
[17:45:08:805] : Value: 17:01:00:DE:07:07:1B:14:1E:28:01:00:32:D0:11
[17:45:08:805] : The Characteristic Value Notification event is received.
[17:45:08:805] : Attribute Handle: 0x0013
[17:45:08:805] : Value: DF:01:00:00:05:32:D0:03:43:0C:03:4E:03:32:A0:32:00
[17:45:08:805] : The Characteristic Value Notification event is received.
[17:45:08:805] : Attribute Handle: 0x0010
[17:45:08:805] : Value: 0B:02:00:DE:07:07:1B:14:1E:28:02:00:32:B0:11:01:00
[17:45:08:805] : The Characteristic Value Notification event is received.
[17:45:08:805] : Attribute Handle: 0x0010
[17:45:08:805] : Value: 09:03:00:DE:07:07:1B:14:1E:28:3C:00:01:00
[17:45:08:805] : The Characteristic Value Notification event is received.
[17:45:08:805] : Attribute Handle: 0x0010
[17:45:08:805] : Value: 17:04:00:DE:07:07:1B:14:1E:28:3C:00:32:D0:11
[17:45:08:806] : The Characteristic Value Notification event is received.
[17:45:08:806] : Attribute Handle: 0x0013
[17:45:08:806] : Value: DF:04:00:00:05:32:D0:03:43:0C:03:4E:03:32:A0:32:00
[17:45:08:807] : The Characteristic Value Notification event is received.
[17:45:08:807] : Attribute Handle: 0x0010
[17:45:08:807] : Value: 0B:05:00:DE:07:07:1B:14:1E:28:3B:00:32:B0:11:01:00
[17:45:08:810] : The Characteristic Value Notification event is received.
[17:45:08:810] : Attribute Handle: 0x0010
[17:45:08:810] : Value: 09:06:00:DE:07:07:1B:14:1E:28:C4:FF:01:00
[17:45:08:814] : The Characteristic Value Notification event is received.
[17:45:08:814] : Attribute Handle: 0x0010
[17:45:08:814] : Value: 17:07:00:DE:07:07:1B:14:1E:28:C4:FF:32:D0:11
[17:45:08:817] : The Characteristic Value Notification event is received.
[17:45:08:817] : Attribute Handle: 0x0013
[17:45:08:817] : Value: DF:07:00:00:05:32:D0:03:43:0C:03:4E:03:32:A0:32:00
[17:45:08:819] : The Characteristic Value Notification event is received.
[17:45:08:819] : Attribute Handle: 0x0010
[17:45:08:819] : Value: 0B:08:00:DE:07:07:1B:14:1E:28:C6:FF:32:B0:11:01:00
[17:45:08:822] : The Characteristic Value Notification event is received.
[17:45:08:822] : Attribute Handle: 0x0010
[17:45:08:822] : Value: 0B:09:00:DE:07:07:1B:14:20:2D:0A:00:37:B0:11:01:00
[17:45:08:827] : The Characteristic Value Notification event is received.
[17:45:08:827] : Attribute Handle: 0x0010
[17:45:08:827] : Value: 1B:0A:00:DE:07:07:1B:14:21:2E:0B:00:32:B0:11:01:00
[17:45:08:827] : The Characteristic Value Indication event is received.
[17:45:08:827] : Attribute Handle: 0x0018
[17:45:08:827] : Value: 06:00:01:01
[17:45:08:871] : The Characteristic Value Notification event is received.
[17:45:08:871] : Attribute Handle: 0x0013
[17:45:08:871] : Value: DF:0A:00:00:05:32:D0:03:43:0C:03:4E:03:32:A0:32:00
[17:45:09:617] : The Characteristic Value Notification event is received.
[17:45:09:617] : Attribute Handle: 0x0025
[17:45:09:617] : Value: [04]
[17:45:11:113] : The Characteristic Value Notification event is received.
[17:45:11:113] : Attribute Handle: 0x0025
[17:45:11:113] : Value: [04]
```

6. Do the following to test example, using the CySmart mobile app as Glucose Meter Service Client:
 - a. Launch CySmart mobile app and swipe down the screen to refresh the list of BLE devices available nearby.
 - b. Make sure that the development kit is advertising (green LED is blinking): you may need to press the **SW1** button in order to wake up the device from Hibernate mode.
 - c. Once the "Glucose Meter" device appears on the BLE devices list, connect to it and choose "Glucose Service" in the service selector.
 - d. Press '**READ LAST**' button to read last record from the Glucose Meter device.

Figure 7. CySmart iOS App

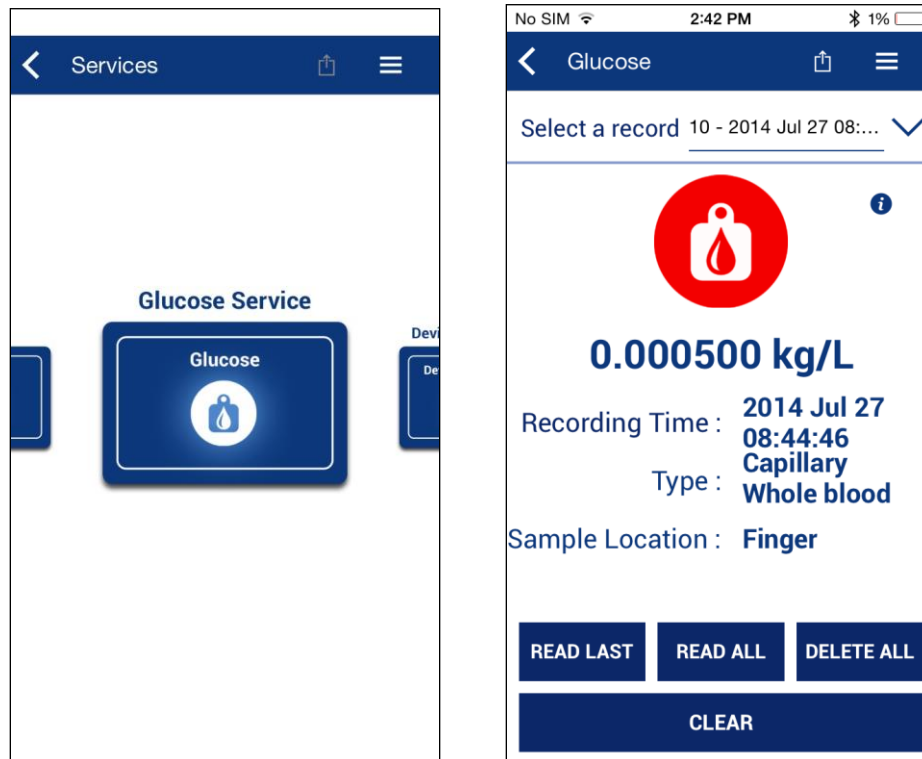

7. Use the UART debug port to view verbose messages:
 - a. The code example ships with the UART debug port enabled. To disable it, set the macro `DEBUG_UART_ENABLED` in `common.h` to `DISABLED` and rebuild the code.
 - b. The output of the debug serial port looks like the sample below.

BLE Glucose Meter Example Project

```

CY_BLE_EVT_STACK_ON, StartAdvertisement
CY_BLE_EVT_SET_DEVICE_ADDR_COMPLETE
CY_BLE_EVT_LE_SET_EVENT_MASK_COMPLETE
CY_BLE_EVT_GET_DEVICE_ADDR_COMPLETE: 00a05000000a
CY_BLE_EVT_SET_TX_PWR_COMPLETE
CY_BLE_EVT_SET_TX_PWR_COMPLETE
CY_BLE_EVT_GAPP_ADVERTISEMENT_START_STOP, state: 2
CY_BLE_EVT_GAP_KEYS_GEN_COMPLETE
CY_BLE_EVT_GATT_CONNECT_IND: 0, 4
CY_BLE_EVT_GAP_DEVICE_CONNECTED: connIntv = 7 ms
SimulBatteryLevelUpdate: 3
CY_BLE_EVT_GATTS_XCNHG_MTU_REQ
CY_BLE_EVT_GATTS_READ_CHAR_VAL_ACCESS_REQ: handle: 3
SimulBatteryLevelUpdate: 4
  
```

CY_BLE_EVT_GAP_AUTH_REQ: bdHandle=4, security=3, bonding=1, ekeySize=10, err=0
CY_BLE_EVT_GAP_SMP_NEGOTIATED_AUTH_INFO: bdHandle=4, security=2, bonding=1, ekeySize=10, err=0
CY_BLE_EVT_GAP_PASSKEY_DISPLAY_REQUEST: 143598
SimulBatteryLevelUpdate: 5
CY_BLE_EVT_STACK_BUSY_STATUS: 1
CY_BLE_EVT_GAP_ENCRYPT_CHANGE: 0
CY_BLE_EVT_STACK_BUSY_STATUS: 0
CY_BLE_EVT_GAP_KEYINFO_EXCHNGE_CMPLT
CY_BLE_EVT_GAP_AUTH_COMPLETE: security=2, bonding=1, ekeySize=10, authErr 0
CY_BLE_EVT_PENDING_FLASH_WRITE
Store bonding data, status: 140001, pending: 1
Store bonding data, status: 140001, pending: 1
Store bonding data, status: 140001, pending: 1
Store bonding data, status: 0, pending: 0
SimulBatteryLevelUpdate: 6
CY_BLE_EVT_GATTS_INDICATION_ENABLED
Store bonding data, status: 0, pending: 0
CY_BLE_EVT_GATTS_READ_CHAR_VAL_ACCESS_REQ: handle: d
RACP characteristic indication is enabled
Store bonding data, status: 0, pending: 0
SimulBatteryLevelUpdate: 7
CY_BLE_EVT_GATTS_READ_CHAR_VAL_ACCESS_REQ: handle: 19
Glucose Measurement Context characteristic notification is enabled
Store bonding data, status: 0, pending: 0
CY_BLE_EVT_GATTS_READ_CHAR_VAL_ACCESS_REQ: handle: 14
Glucose Measurement characteristic notification is enabled
Store bonding data, status: 0, pending: 0
CY_BLE_EVT_GATTS_READ_CHAR_VAL_ACCESS_REQ: handle: 11
BAS event: 10032, CY_BLE_EVT_BASS_NOTIFICATION_ENABLED 0 4: serviceIndex=0
Store bonding data, status: 0, pending: 0
CY_BLE_EVT_GATTS_READ_CHAR_VAL_ACCESS_REQ: handle: 27
SimulBatteryLevelUpdate: 8
CY_BLE_EVT_GATTS_READ_CHAR_VAL_ACCESS_REQ: handle: 3
CY_BLE_EVT_GATTS_READ_CHAR_VAL_ACCESS_REQ: handle: 5
CY_BLE_EVT_GATTS_READ_CHAR_VAL_ACCESS_REQ: handle: 7
CY_BLE_EVT_GATTS_READ_CHAR_VAL_ACCESS_REQ: handle: 9
CY_BLE_EVT_GATTS_READ_CHAR_VAL_ACCESS_REQ: handle: 16
CY_BLE_EVT_GATTS_READ_CHAR_VAL_ACCESS_REQ: handle: 1c
CY_BLE_EVT_GATTS_READ_CHAR_VAL_ACCESS_REQ: handle: 1e
CY_BLE_EVT_GATTS_READ_CHAR_VAL_ACCESS_REQ: handle: 20
CY_BLE_EVT_GATTS_READ_CHAR_VAL_ACCESS_REQ: handle: 22
CY_BLE_EVT_GATTS_READ_CHAR_VAL_ACCESS_REQ: handle: 25
SimulBatteryLevelUpdate: 9
RACP is written: 01 01
Opcode: Report stored records
Operator: All records
Glucose Ntf: 0
Glucose Ntf: 1
CY_BLE_EVT_STACK_BUSY_STATUS: 1
Glucose Context Ntf: 1
CY_BLE_EVT_STACK_BUSY_STATUS: 0
Glucose Ntf: 2
CY_BLE_EVT_STACK_BUSY_STATUS: 1
Glucose Ntf: 3
CY_BLE_EVT_STACK_BUSY_STATUS: 0
Glucose Ntf: 4
CY_BLE_EVT_STACK_BUSY_STATUS: 1
Glucose Context Ntf: 4
CY_BLE_EVT_STACK_BUSY_STATUS: 0
Glucose Ntf: 5
CY_BLE_EVT_STACK_BUSY_STATUS: 1
Glucose Ntf: 6
CY_BLE_EVT_STACK_BUSY_STATUS: 0
Glucose Ntf: 7
CY_BLE_EVT_STACK_BUSY_STATUS: 1
Glucose Context Ntf: 7
CY_BLE_EVT_STACK_BUSY_STATUS: 0
Glucose Ntf: 8


```

CY_BLE_EVT_STACK_BUSY_STATUS: 1
Glucose Ntf: 9
CY_BLE_EVT_STACK_BUSY_STATUS: 0
Glucose Ntf: 10
CY_BLE_EVT_STACK_BUSY_STATUS: 1
Glucose Context Ntf: 10
CY_BLE_EVT_STACK_BUSY_STATUS: 0
RACP Ind: 6 0 1 1
RACP characteristic indication is confirmed
SimulBatteryLevelUpdate: 10
  
```


Design and Implementation

This example project demonstrates the BLE Glucose Meter application workflow. The Glucose Meter application uses the BLE Glucose Profile to report glucose measurement records to a Client. Also, the Glucose Meter application uses the Battery Service to notify the Battery Level and the Device Information Services to assert the Device Name, etc.

Design

Figure 8 shows the top design schematic.

Figure 8. BLE Glucose Meter Code-Example Schematic

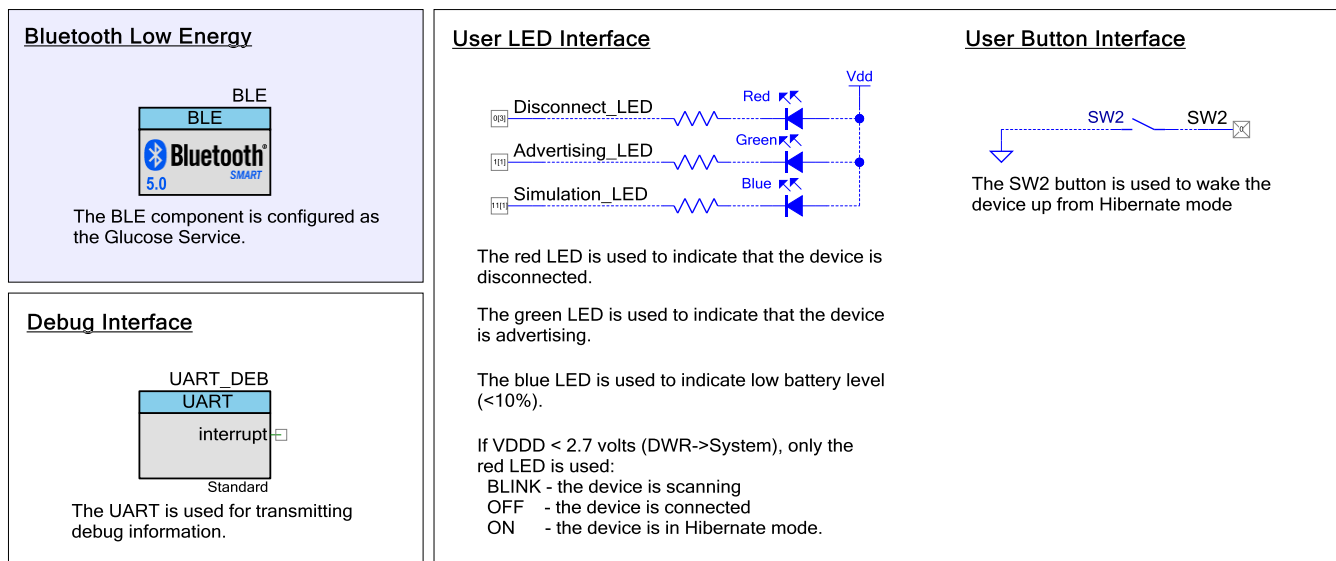

After a startup, the device performs the BLE Component initialization. In this project, three callback functions are required for the BLE operation. One callback function (AppCallBack()) is required to receive generic events from the BLE stack and the service-specific callbacks BasCallBack() and GlsCallBack() for Battery and Glucose service-specific events accordingly. The CY_BLE_EVT_STACK_ON event indicates a successful initialization of the BLE stack. After this event is received, the Component starts advertising with the packet structure as configured in the BLE Component Customizer. The BLE Component stops advertising after a 180-second advertising period expires.

The Glucose Meter device can be connected to any BLE (4.0 or later)-compatible device configured as the GAP Central role and GATT Client which supports the Glucose Profile. Also, the Battery and Device Information Services may be optionally used. To connect to the Glucose Meter device, send a connection request to the device while the device is advertising.

While connected to the Client and between the connection intervals, the device is put into Sleep mode.

The BLE timer is used to time the simulations, measurements, and LED blinking.

Pin assignments

Pin assignments and connections required on the development board for supported kits are in [Table 1](#)

Table 1. Pin Assignment

Pin Name	Comment	
	CY8CKIT-062	
\UART_DEB:rx\	P5[0]	
\UART_DEB:tx\	P5[1]	
\UART_DEB:rts\	P5[2]	
\UART_DEB:cts\	P5[3]	
Advertising_LED	P1[1]	The green color of the RGB LED
Disconnect_LED	P0[3]	The red color of the RGB LED
Simulation_LED	P11[1]	The blue color of the RGB LED
SW2	P0[4]	

Components and Settings

[Table 2](#) lists the PSoC Creator Components used in this example, how they are used in the design, and the non-default settings required so they function as intended.

Table 2. PSoC Creator Components

Component	Instance Name	Purpose	Non-default Settings
Bluetooth Low Energy (BLE)	BLE	The BLE component is configured to demonstrate operation of the Environmental Sensing Sensor device.	Refer to Parameter Settings section
Digital Input Pin	SW2	This pin is used to generate interrupts when the user button (SW2) is pressed.	[General tab] Uncheck HW connection Drive mode: Resistive Pull Up
Digital Output pin	Disconnect_LED Advertising_LED Connected_LED	These GPIOs are configured as firmware-controlled digital output pins that control LEDs.	[General tab] Uncheck HW connection Drive mode: Strong Drive
UART (SCB)	UART_DEBUG	This Component is used to print messages on a terminal program.	Default

For information on the hardware resources used by a Component, see the Component datasheet.

Parameter Settings

The BLE Component is configured as the Glucose Meter Server in the GAP Peripheral role. Also, the Battery and Device Information Services are included.

The BLE Component is also configured to have:

- Public Device Address: 00A050-00000a
- Device name: Glucose Meter
- Appearances: Generic Glucose Meter
- Security Level: Authenticated pairing with encryption
- I/O capabilities: Display
- Bonding requirements: Bonding

Figure 9. General Settings

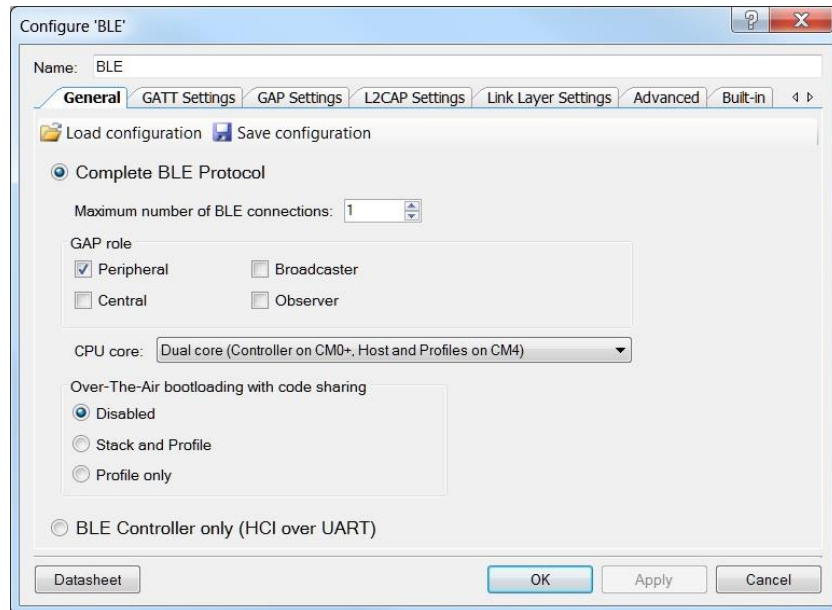


Figure 10. GATT Settings


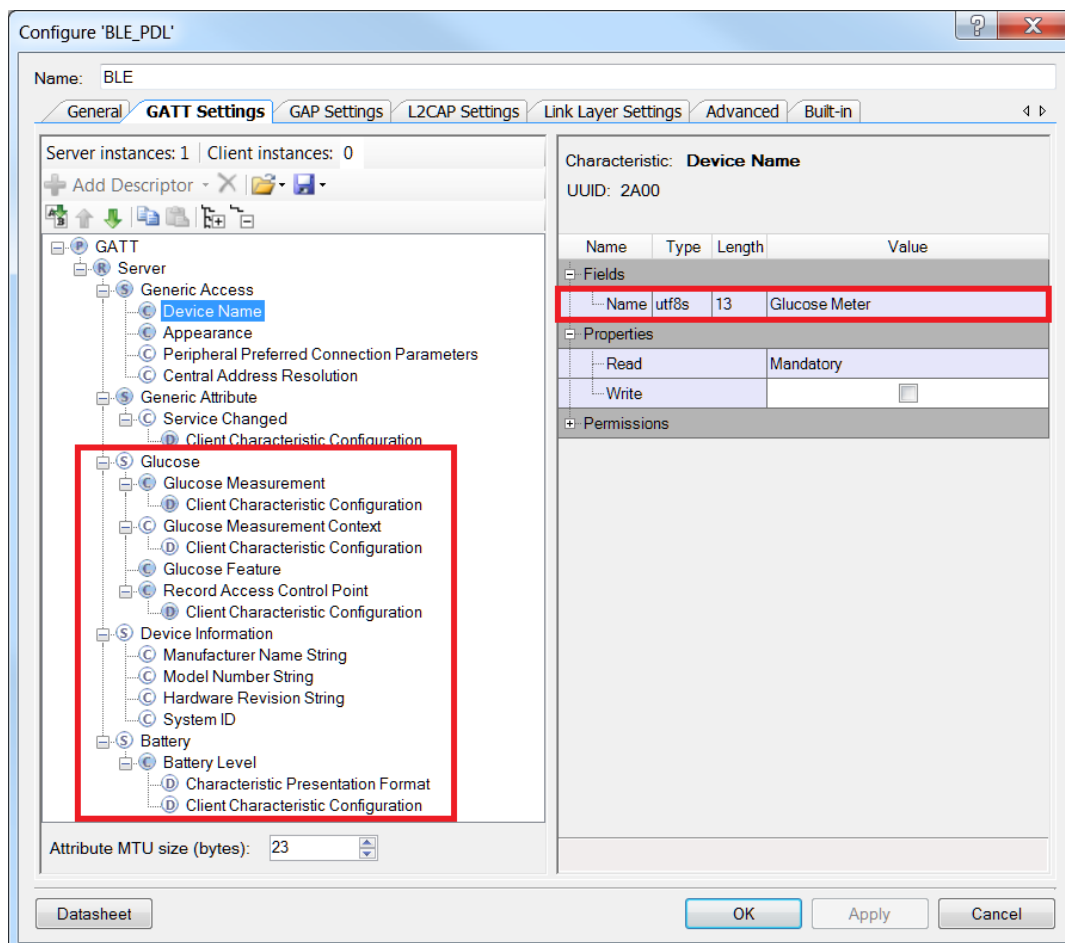


Figure 11. GAP Settings

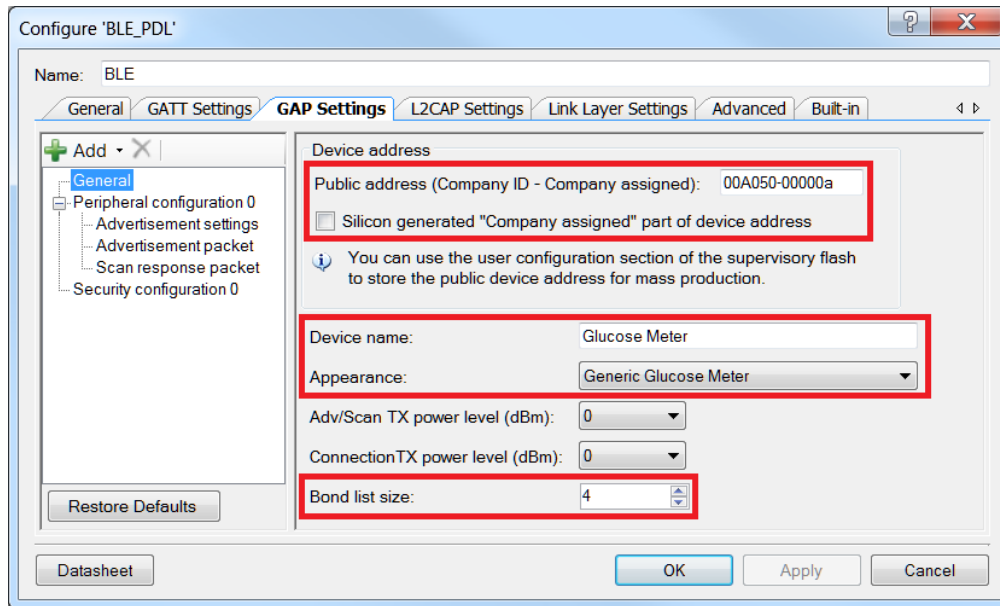

Configure 'BLE_PDL'

Name: BLE

General GATT Settings **GAP Settings** L2CAP Settings Link Layer Settings Advanced Built-in

+ Add - X

General

- Peripheral configuration 0
 - Advertisement settings
 - Advertisement packet
 - Scan response packet
 - Security configuration 0

Restore Defaults

Device address

Public address (Company ID - Company assigned): 00A050-00000a

☐ Silicon generated "Company assigned" part of device address

You can use the user configuration section of the supervisory flash to store the public device address for mass production.

Device name: Glucose Meter

Appearance: Generic Glucose Meter


Adv/Scan TX power level (dBm): 0

Connection TX power level (dBm): 0

Bond list size: 4

Datasheet OK Apply Cancel

Figure 12. GAP Settings > Advertisement Setting

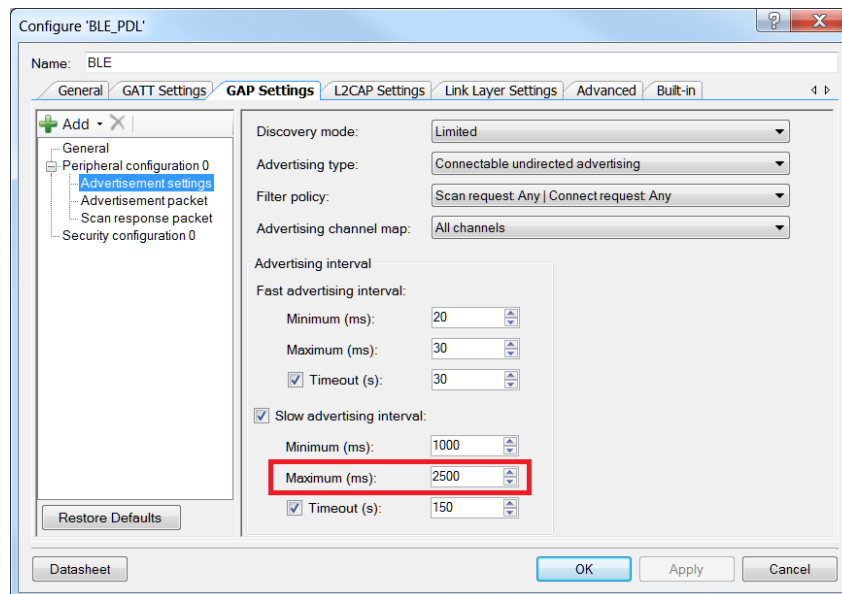

Configure 'BLE_PDL'

Name: BLE

General GATT Settings **GAP Settings** L2CAP Settings Link Layer Settings Advanced Built-in

+ Add - X

General

- Peripheral configuration 0
 - Advertisement settings
 - Advertisement packet
 - Scan response packet
 - Security configuration 0

Restore Defaults

Discovery mode: Limited

Advertising type: Connectable undirected advertising

Filter policy: Scan request Any | Connect request Any

Advertising channel map: All channels

Advertising interval

Fast advertising interval:

Minimum (ms): 20

Maximum (ms): 30

☒ Timeout (s): 30

☒ Slow advertising interval:


Minimum (ms): 1000

Maximum (ms): 2500

☒ Timeout (s): 150

Datasheet OK Apply Cancel

Figure 13. GAP Settings > Advertisement Packet

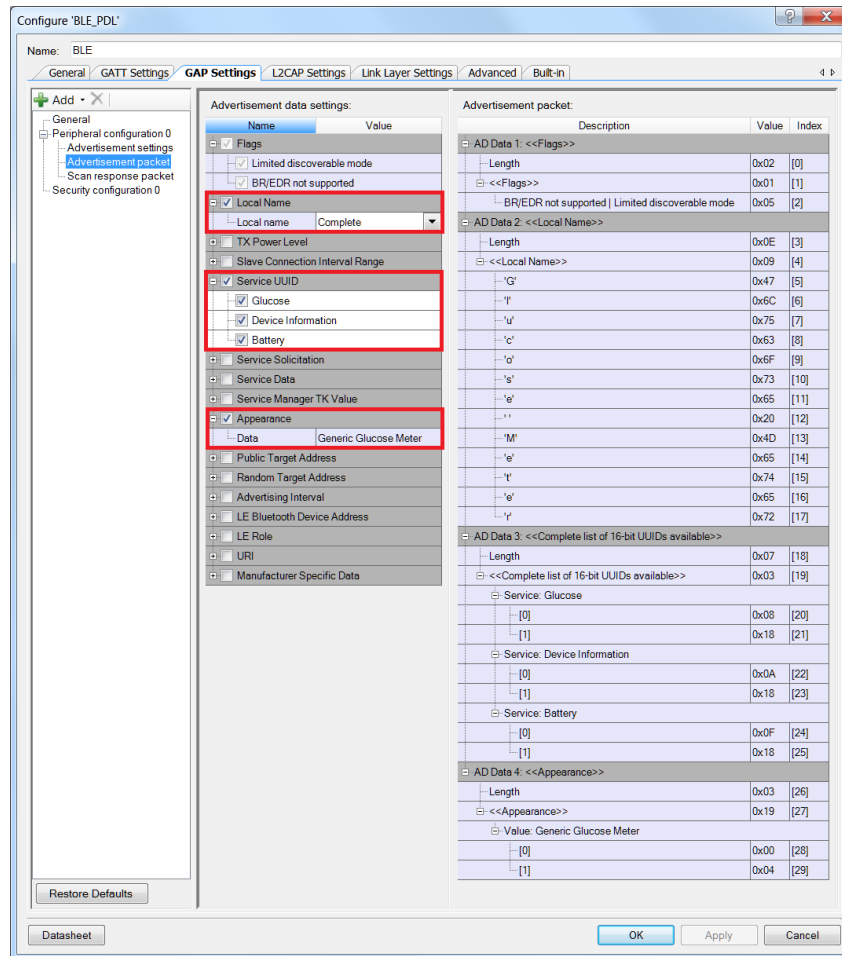

Configure 'BLE_PDL'

Name: BLE

General | GATT Settings | **GAP Settings** | L2CAP Settings | Link Layer Settings | Advanced | Built-in

Peripheral configuration 0
 Advertisement settings
 Advertisement packet
 Scan response packet
 Security configuration 0

Advertisement data settings:

Name	Value
Flags	<input checked="" type="checkbox"/> Limited discoverable mode <input checked="" type="checkbox"/> BR/EDR not supported
Local Name	Complete
TX Power Level	
Slave Connection Interval Range	
Service UUID	Glucose
Device Information	
Battery	
Service Solicitation	
Service Data	
Service Manager TK Value	
Appearance	Generic Glucose Meter
Public Target Address	
Random Target Address	
Advertising Interval	
LE Bluetooth Device Address	
LE Role	
URI	
Manufacturer Specific Data	

Advertisement packet:


Description	Value	Index
AD Data 1: <<Flags>>		
Length	0x02	[0]
<<Flags>>	0x01	[1]
BR/EDR not supported Limited discoverable mode	0x05	[2]
AD Data 2: <<Local Name>>		
Length	0x0E	[3]
<<Local Name>>	0x09	[4]
'G'	0x47	[5]
'l'	0x6C	[6]
'u'	0x75	[7]
'c'	0x63	[8]
'o'	0x6F	[9]
's'	0x73	[10]
'e'	0x65	[11]
'.'	0x20	[12]
'M'	0x4D	[13]
'e'	0x65	[14]
't'	0x74	[15]
'e'	0x65	[16]
'r'	0x72	[17]
AD Data 3: <<Complete list of 16-bit UUIDs available>>		
Length	0x07	[18]
<<Complete list of 16-bit UUIDs available>>	0x03	[19]
Service: Glucose		
[0]	0x08	[20]
[1]	0x18	[21]
Service: Device Information		
[0]	0x0A	[22]
[1]	0x18	[23]
Service: Battery		
[0]	0x0F	[24]
[1]	0x18	[25]
AD Data 4: <<Appearance>>		
Length	0x03	[26]
<<Appearance>>	0x19	[27]
Value: Generic Glucose Meter		
[0]	0x00	[28]
[1]	0x04	[29]

Restore Defaults

Datasheet

OK Apply Cancel

Figure 14. GAP Settings > Security Configuration

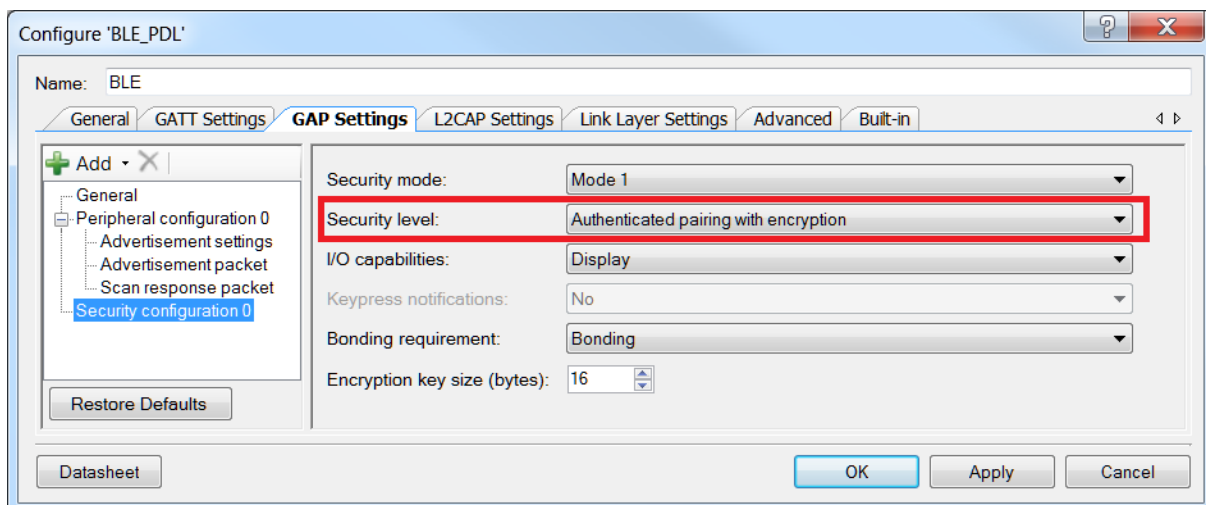

Configure 'BLE_PDL'

Name: BLE

General | GATT Settings | **GAP Settings** | L2CAP Settings | Link Layer Settings | Advanced | Built-in

Peripheral configuration 0
 Advertisement settings
 Advertisement packet
 Scan response packet
 Security configuration 0

Security mode: Mode 1

Security level: Authenticated pairing with encryption

I/O capabilities: Display

Keypress notifications: No

Bonding requirement: Bonding

Encryption key size (bytes): 16

Restore Defaults

Datasheet

OK Apply Cancel

Switching the CPU Cores Usage

This section describes how to switch between different CPU cores usage (Single core/ Dual core) in the BLE PDL examples.

The BLE component has the CPU Core parameter that defines the cores usage. It can take the following values:

- Single core (Complete Component on CM0+) – only CM0+ core will be used.
- Single core (Complete Component on CM4) – only CM4 core will be used.
- Dual core (Controller on CM0+, Host and Profiles on CM4) – both cores will be used: CM0+ for the Controller and CM4 for the Host and Profiles.


The BLE example structure allows easy switching between different CPU cores options. Important to remember:

- All application host-files must be run on the host core.
- The BLESS interrupt must be assigned to the core where the controller runs.
- All additional interrupts (SW2, MCWDT, etc.) used in the example must be assigned to the host core.

Steps for switching the CPU Cores usage:

1. In the BLE customizer **General** tab, select appropriate CPU core option.


Figure 15. Select CPU Core

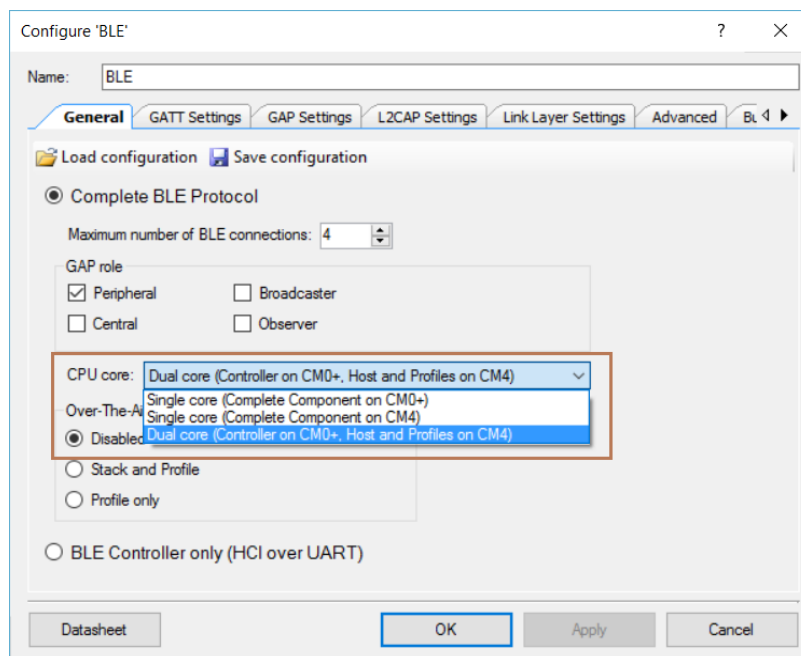

2. Identify the core on which host files will run. In the workspace explorer panel, right click **Host Files**, choose **Properties**. Set the **Cores** property corresponding to the CPU core chosen in step 1, as shown in Figure 16.


- for Single core (Complete Component on CM0+) option – CM0+
- for Single core (Complete Component on CM4) option – CM4
- for Dual core (Controller on CM0+, Host and Profiles on CM4) option – CM4

Figure 16. Change Core Properties

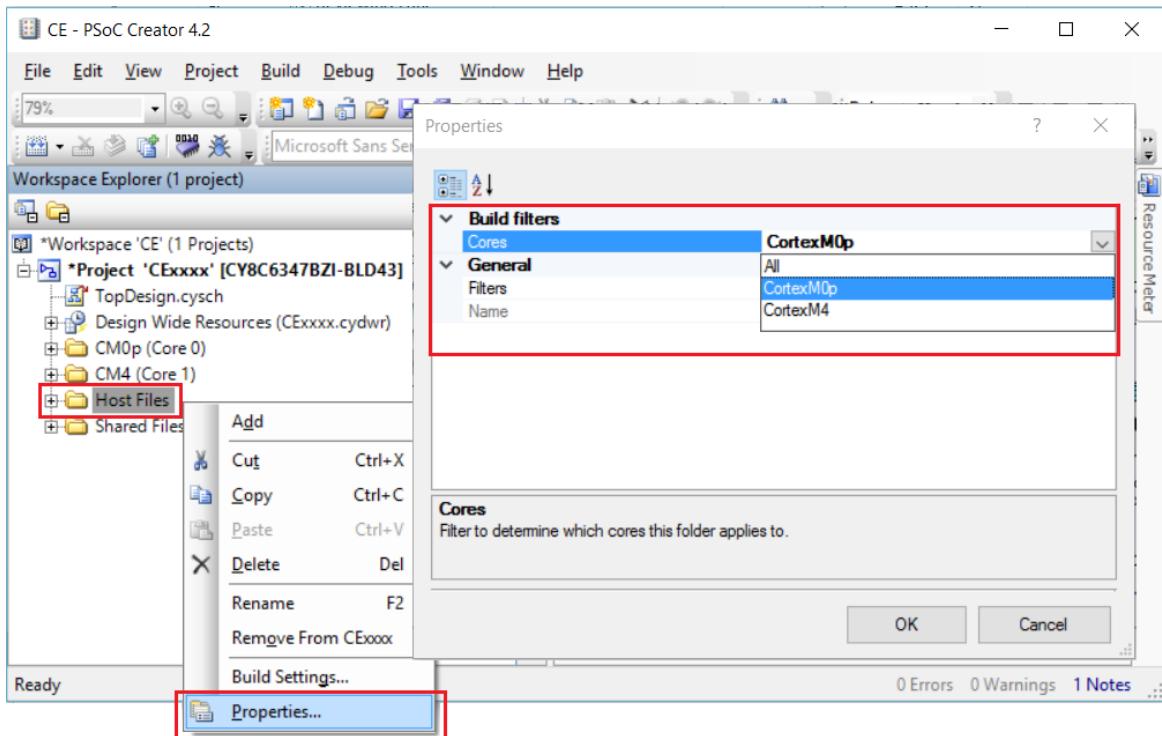

3. Assign the BLE_bless_isr and other peripheral (button – SW2, timer(s) etc.) interrupts to appropriate core in DWR-> interrupts tab:
 - for **Single core (Complete Component on CM0+)** option: BLE_bless_isr and peripheral interrupts on **CM0+**
 - for **Single core (Complete Component on CM4)** option: BLE_bless_isr and peripheral interrupts on **CM4**
 - for **Dual core (Controller on CM0+, Host and Profiles on CM4)** option: BLE_bless_isr interrupt on **CM0+**, other peripheral interrupts on **CM4**

Figure 17. Assign Interrupts

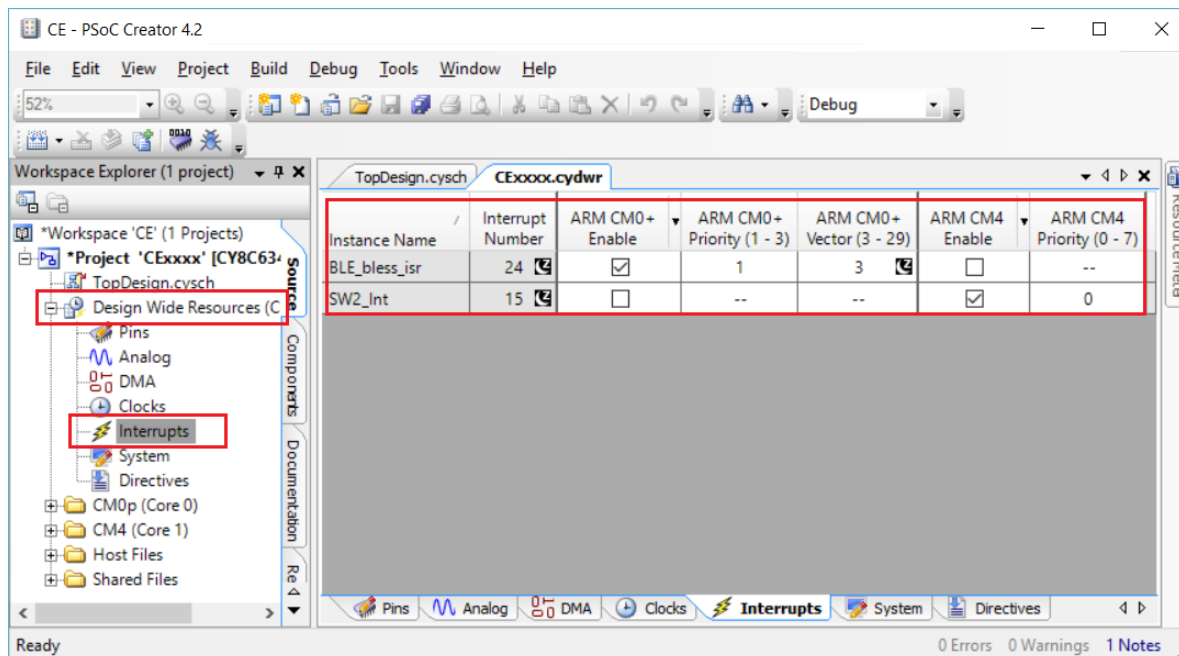

Reusing This Example

This example is designed for the CY8CKIT-062-BLE pioneer kit. To port the design to a different PSoC 6 MCU device and/or kit, change the target device using the Device Selector and update the pin assignments in the Design Wide Resources Pins settings as needed.

Related Documents

The following table lists all relevant application notes, code examples, knowledge base articles, device datasheets and Component datasheets.

Table 3. Related Documents

Application Notes		
AN210781	Getting Started with PSoC 6 MCU with Bluetooth Low Energy (BLE) Connectivity	Describes PSoC 6 BLE, and how to build a basic code example.
AN215656	PSoC 6 MCU Dual-CPU System Design	Presents the theory and design considerations related to this code example.
Software and Drivers		
CySmart – Bluetooth® LE Test and Debug Tool		CySmart is a Bluetooth® LE host emulation tool for Windows PCs. The tool provides an easy-to-use Graphical User Interface (GUI) to enable the user to test and debug their Bluetooth LE peripheral applications.
PSoC Creator Component Datasheets		
Bluetooth Low Energy (BLE_PDL) Component		The Bluetooth Low Energy (BLE_PDL) Component provides a comprehensive GUI-based configuration window to facilitate designing applications requiring BLE connectivity.
Device Documentation		
PSoC® 6 MCU: PSoC 63 with BLE. Datasheet.		PSoC® 6 MCU: PSoC 63 with BLE Architecture Technical Reference Manual
Development Kit (DVK) Documentation		
CY8CKIT-062-BLE PSoC 6 BLE Pioneer Kit		

Document History

Document Title: CE217638 - BLE Glucose Meter with PSoC 6 MCU with BLE Connectivity

Document Number: 002-17638

Revision	ECN	Orig. of Change	Submission Date	Description of Change
**	6090385	NPAL	05/14/2018	New spec

Worldwide Sales and Design Support

Cypress maintains a worldwide network of offices, solution centers, manufacturer's representatives, and distributors. To find the office closest to you, visit us at [Cypress Locations](#).

Products

ARM® Cortex® Microcontrollers	cypress.com/arm
Automotive	cypress.com/automotive
Clocks & Buffers	cypress.com/clocks
Interface	cypress.com/interface
Internet of Things	cypress.com/iot
Memory	cypress.com/memory
Microcontrollers	cypress.com/mcu
PSoC	cypress.com/psoc
Power Management ICs	cypress.com/pmic
Touch Sensing	cypress.com/touch
USB Controllers	cypress.com/usb
Wireless Connectivity	cypress.com/wireless

PSoC® Solutions

[PSoC 1](#) | [PSoC 3](#) | [PSoC 4](#) | [PSoC 5LP](#) | [PSoC 6 MCU](#)

Cypress Developer Community

[Community Forums](#) | [Projects](#) | [Videos](#) | [Blogs](#) | [Training](#) | [Components](#)

Technical Support

cypress.com/support



Cypress Semiconductor
198 Champion Court
San Jose, CA 95134-1709

© Cypress Semiconductor Corporation, 2018. This document is the property of Cypress Semiconductor Corporation and its subsidiaries, including Spanion LLC ("Cypress"). This document, including any software or firmware included or referenced in this document ("Software"), is owned by Cypress under the intellectual property laws and treaties of the United States and other countries worldwide. Cypress reserves all rights under such laws and treaties and does not, except as specifically stated in this paragraph, grant any license under its patents, copyrights, trademarks, or other intellectual property rights. If the Software is not accompanied by a license agreement and you do not otherwise have a written agreement with Cypress governing the use of the Software, then Cypress hereby grants you a personal, non-exclusive, nontransferable license (without the right to sublicense) (1) under its copyright rights in the Software (a) for Software provided in source code form, to modify and reproduce the Software solely for use with Cypress hardware products, only internally within your organization, and (b) to distribute the Software in binary code form externally to end users (either directly or indirectly through resellers and distributors), solely for use on Cypress hardware product units, and (2) under those claims of Cypress's patents that are infringed by the Software (as provided by Cypress, unmodified) to make, use, distribute, and import the Software solely for use with Cypress hardware products. Any other use, reproduction, modification, translation, or compilation of the Software is prohibited.

TO THE EXTENT PERMITTED BY APPLICABLE LAW, CYPRESS MAKES NO WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, WITH REGARD TO THIS DOCUMENT OR ANY SOFTWARE OR ACCOMPANYING HARDWARE, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. No computing device can be absolutely secure. Therefore, despite security measures implemented in Cypress hardware or software products, Cypress does not assume any liability arising out of any security breach, such as unauthorized access to or use of a Cypress product. In addition, the products described in these materials may contain design defects or errors known as errata which may cause the product to deviate from published specifications. To the extent permitted by applicable law, Cypress reserves the right to make changes to this document without further notice. Cypress does not assume any liability arising out of the application or use of any product or circuit described in this document. Any information provided in this document, including any sample design information or programming code, is provided only for reference purposes. It is the responsibility of the user of this document to properly design, program, and test the functionality and safety of any application made of this information and any resulting product. Cypress products are not designed, intended, or authorized for use as critical components in systems designed or intended for the operation of weapons, weapons systems, nuclear installations, life-support devices or systems, other medical devices or systems (including resuscitation equipment and surgical implants), pollution control or hazardous substances management, or other uses where the failure of the device or system could cause personal injury, death, or property damage ("Unintended Uses"). A critical component is any component of a device or system whose failure to perform can be reasonably expected to cause the failure of the device or system, or to affect its safety or effectiveness. Cypress is not liable, in whole or in part, and you shall and hereby do release Cypress from any claim, damage, or other liability arising from or related to all Unintended Uses of Cypress products. You shall indemnify and hold Cypress harmless from and against all claims, costs, damages, and other liabilities, including claims for personal injury or death, arising from or related to any Unintended Uses of Cypress products.

Cypress, the Cypress logo, Spanion, the Spanion logo, and combinations thereof, WICED, PSoC, CapSense, EZ-USB, F-RAM, and Traveo are trademarks or registered trademarks of Cypress in the United States and other countries. For a more complete list of Cypress trademarks, visit cypress.com. Other names and brands may be claimed as property of their respective owners.